

AN13860

Creating Firmware Update Image for KW45B41Z/K32W148 using Over the Air Programming Tool

Rev. 1 — 21 March 2023

Application note

Document information

Information	Content
Keywords	AN13860, OTAP, KW45B41Z, Firmware Update Images
Abstract	This application note describes the steps to create and upgrade the image on the KW45/K32W1 Evaluation Kit board



1 Introduction

This document provides the steps to create and upgrade the image on the KW45/K32W1 Evaluation Kit (EVK) board.

The demo can be run using two applications:

- OTAP Client-embedded application
- Over the Air Programming PC application

The OTAP Client-embedded application has two versions: ATT version and L2CAP version. Each version uses a different transfer method.

The OTAP Client is a GAP peripheral which advertises the Bluetooth Low Energy (Bluetooth LE) OTAP service and waits for a connection from an OTAP server. After an OTAP server connects, the OTAP Client waits for it to write the OTAP control point CCCD, and then starts sending commands via ATT indications.

The demo applications use external storage by default. The internal storage is viable only if there is enough space in the internal flash for the upgrade image. The flash in this case must be at least twice the size of the largest application.

2 Prerequisites

To create an image to upgrade, the following prerequisites are required:

- MCUXpresso IDE v11.6.0 or later or IAR EW for Arm, can be downloaded from [MCUXpresso-IDE](#)
- Over the Air Programming tool 1.0.4.1 or above, can be downloaded from [Over the Air Programming](#)
- KW45B41Z/K32W148 board
- A smartphone with IoT toolbox NXP app, available for Android and iOS

3 Software setup with IAR

To configure the software, follow the steps below:

1. To use the external storage, you must do some changes. Several configuration options must be set up in both the source files and the linker options of the toolchain:
 - a. On the `app_preinclude.h`, make sure that `gAppOtaExternalStorage_c` is set to "1".
 - b. The OTAP demo applications for IAR EW IDE have some setting in the linker options as shown in [Figure 1](#).

Creating Firmware Update Image for KW45B41Z/K32W148 using Over the Air Programming Tool

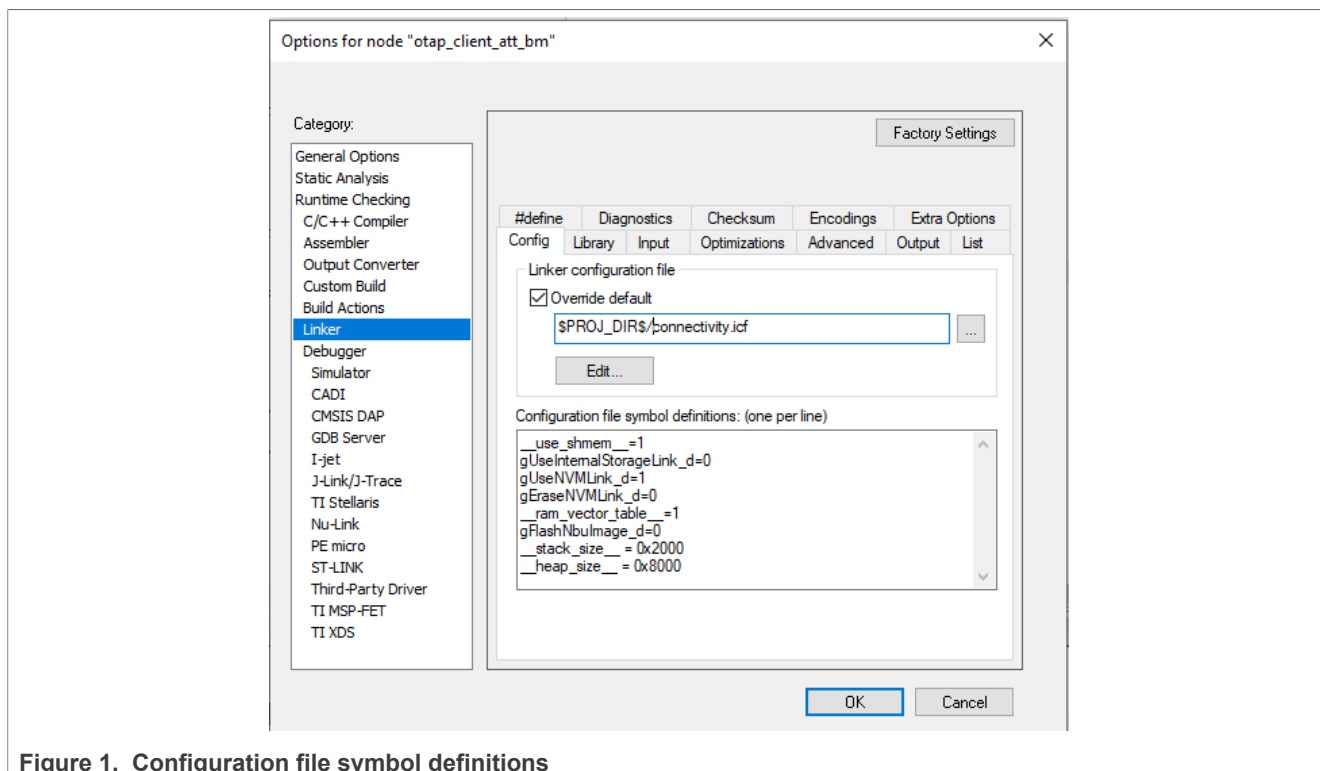


Figure 1. Configuration file symbol definitions

- To use the internal storage, set up the `gUseInternalStorageLink_d=1` symbol in the linker configuration and set the `gAppOtaExternalStorage_value` to "0".

Note:

The `gEraseNVMLink_d=1` IAR linker flag places some dummy bytes into the NVM region to invalidate the data and force the application to erase the entire NVM region. When generating an image for the OTA upgrade, this flag should be set to "0", as well as the `gUseNvmLink_d` flag. Therefore, resulting in a smaller image size being transferred and lower power consumption. If the NVM region must be erased after the upgrade process, the erase sector bitmap must be used to mark the NVM sectors as erasable.

3.1 OTAP image format file

The Bluetooth LE OTAP image file has a binary file format. It is composed of a header followed by a number of subelements. The header describes general information about the file. There are some predefined subelements of a file but an end manufacturer may add manufacturer-specific subelements. The header does not have details of the subelements. The type of each piece is described.

To enable the creation of a SREC and BIN file for your embedded application in IAR Embedded Workbench, the steps are described as follows:

- Open the target properties.
- Go to the **Output Converter** tab.
- Activate the **Generate additional output** checkbox.
- Select the **Motorola or Raw Binary** option from the **Output format** drop-down menu.

Creating Firmware Update Image for KW45B41Z/K32W148 using Over the Air Programming Tool

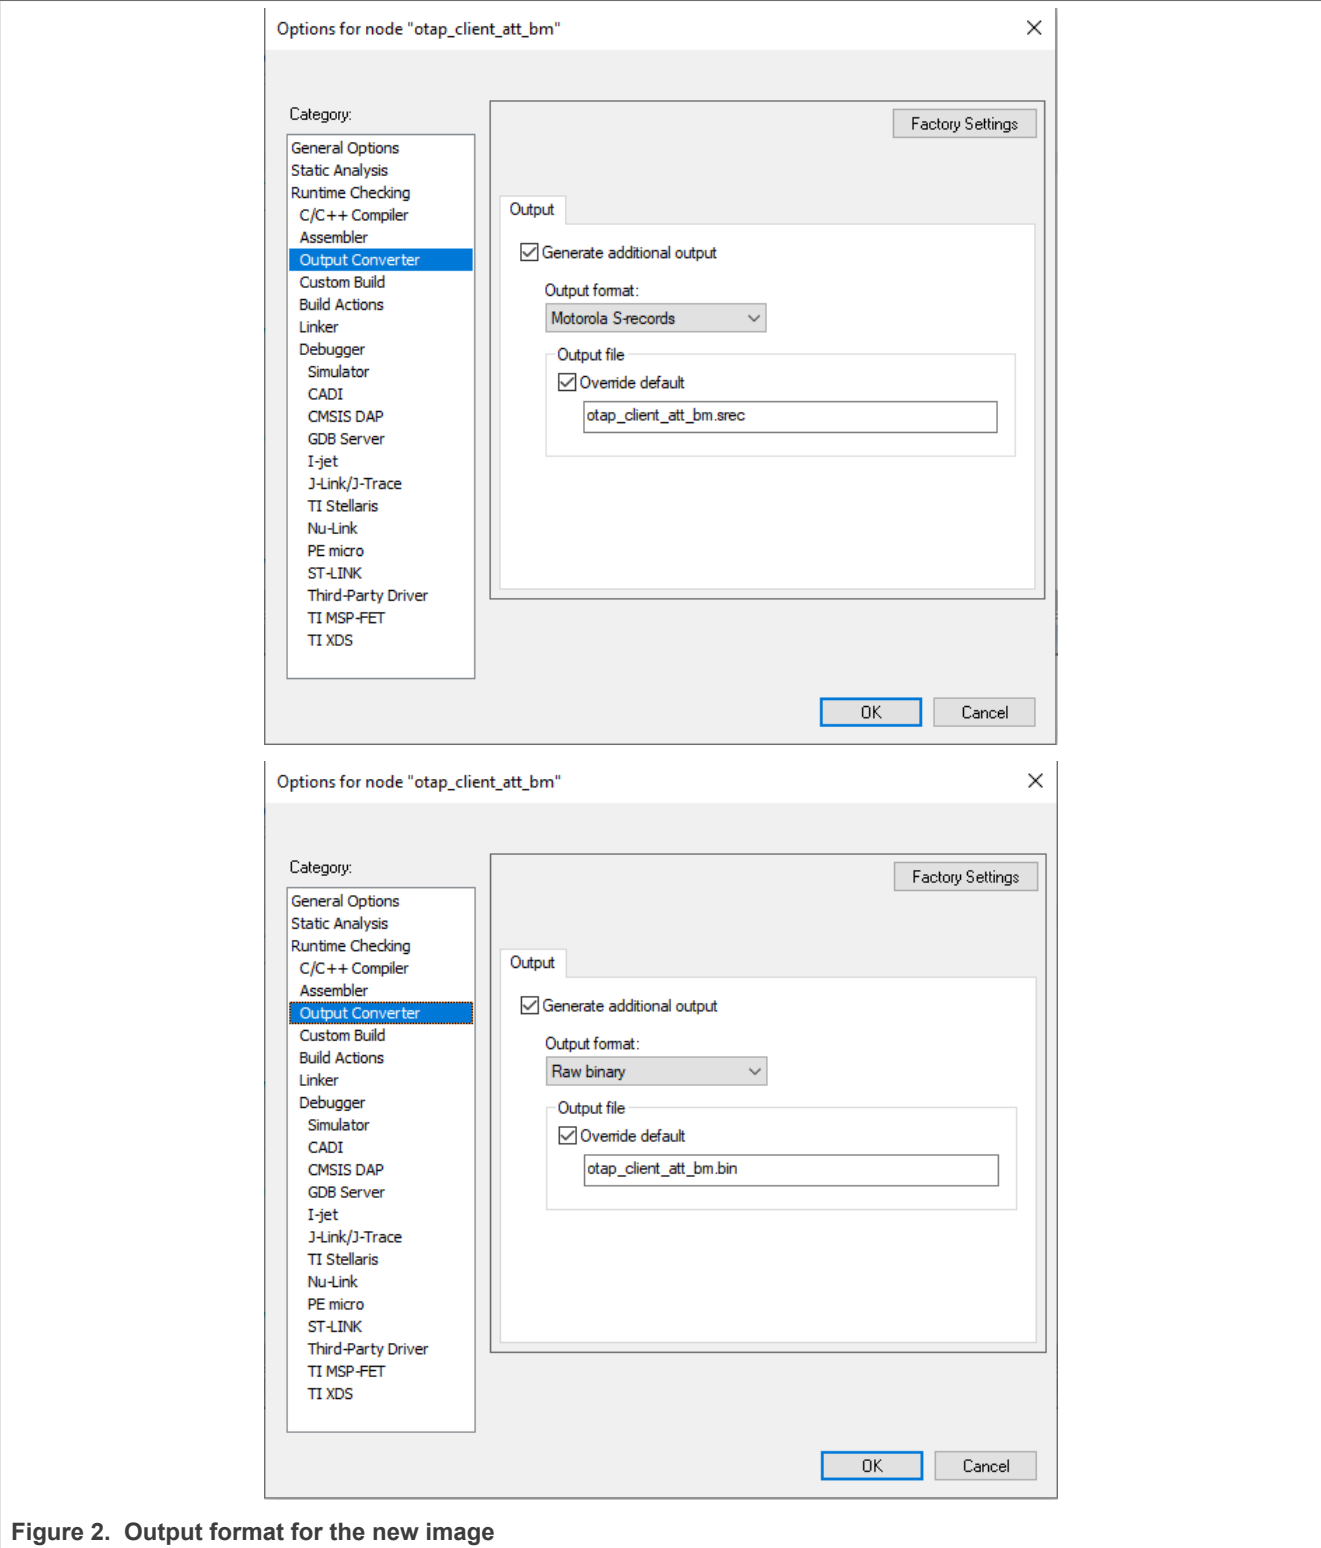


Figure 2. Output format for the new image

4 Software setup with MCUXpresso

To create the image for the application, you must deploy the **Binaries** icon in the workspace. Click the right mouse button on the `.axf` file and select **Binary Utilities** > **Create S-Record**. The S-Record file is saved at the Debug folder in the workspace with `.srec` extension.

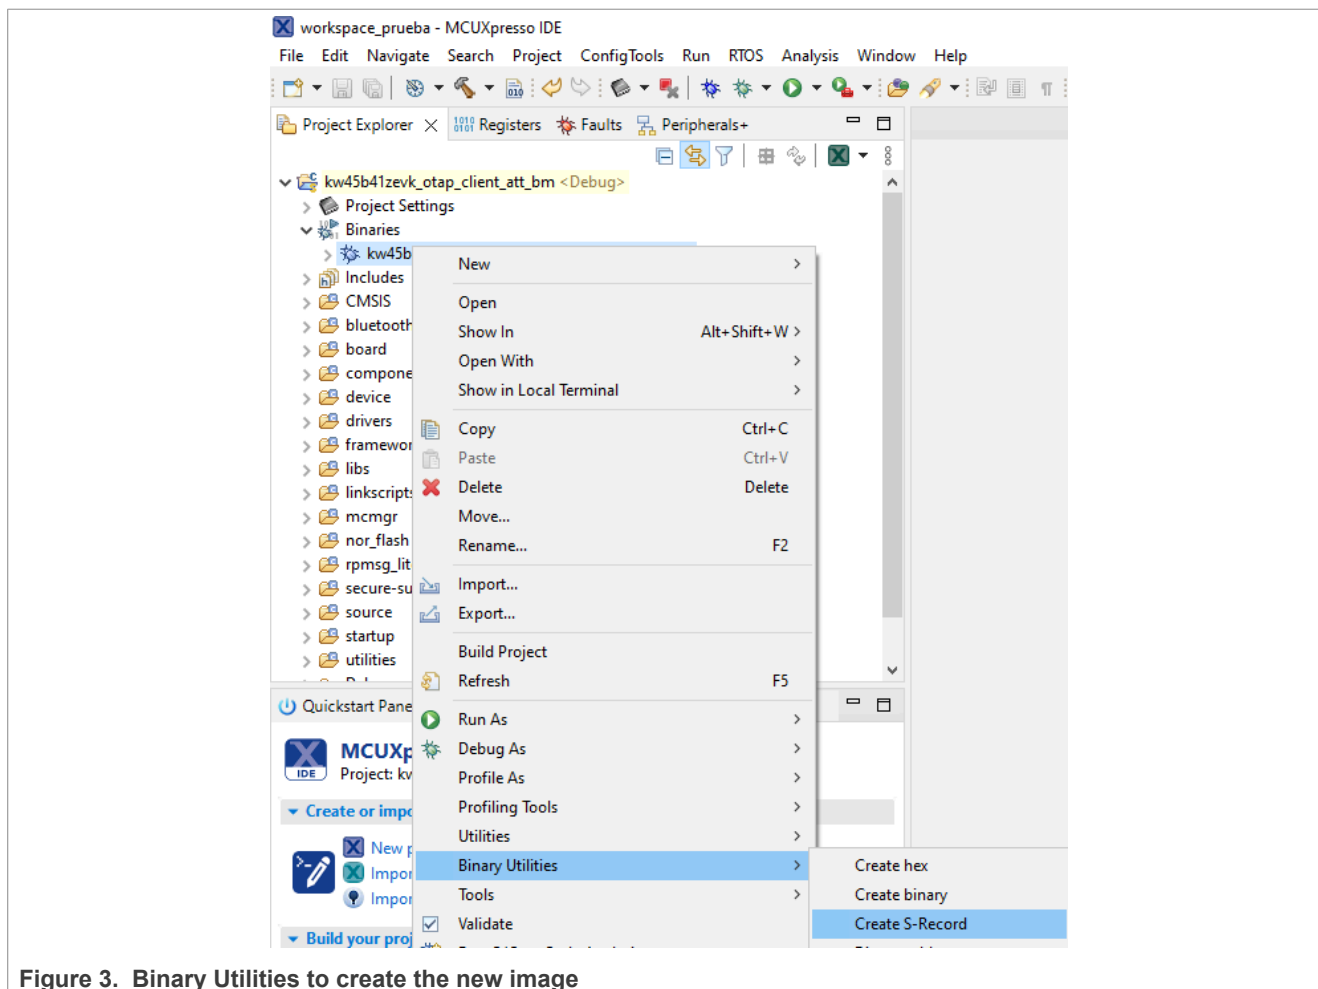


Figure 3. Binary Utilities to create the new image

A Motorola S-record (SREC) file is an ASCII format file which contains binary information. Common file extensions are `.srec`, `.s19`, `.s28`, `.s37` and others. Most modern compiler toolchains can generate an SREC format executable. In MCUXpresso IDE, go to **Project properties** > **Settings** > **Build steps** window and press the **Edit** button for the Post-build steps. A **Post-build steps** window shows up in which the following command must be added:

```
arm-none-eabi-objcopy -v -O srec --only-section=.text --only-section=.data --
only-section=.ARM.exidx
"${BuildArtifactFileName}"
"${BuildArtifactFileBaseName}.srec"
```

A snapshot of this window is shown in [Figure 4](#).

Creating Firmware Update Image for KW45B41Z/K32W148 using Over the Air Programming Tool

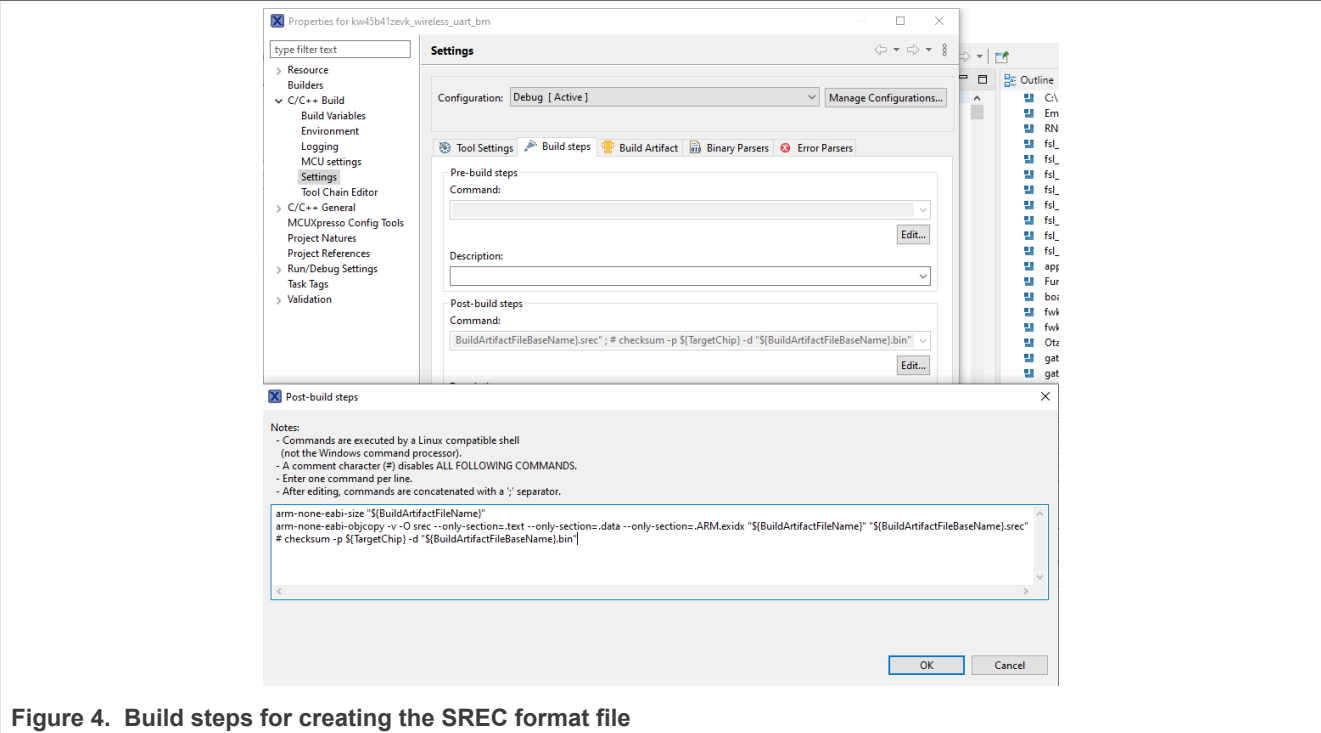


Figure 4. Build steps for creating the SREC format file

5 How to create an image with OTAP tool

This section provides the steps required to create an image for the KW45B41Z-EVK:

1. Navigate to **Over the Air Programming** tool.

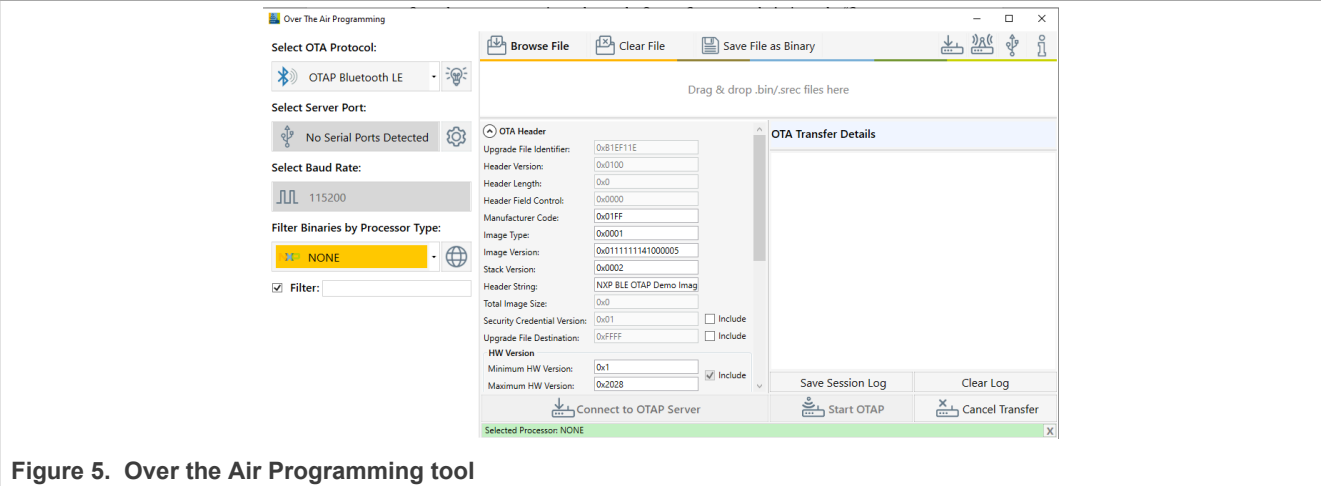


Figure 5. Over the Air Programming tool

2. Drag and drop your .s19 / .srec / .bin.
3. To process the binary, select **KW45**.

Creating Firmware Update Image for KW45B41Z/K32W148 using Over the Air Programming Tool

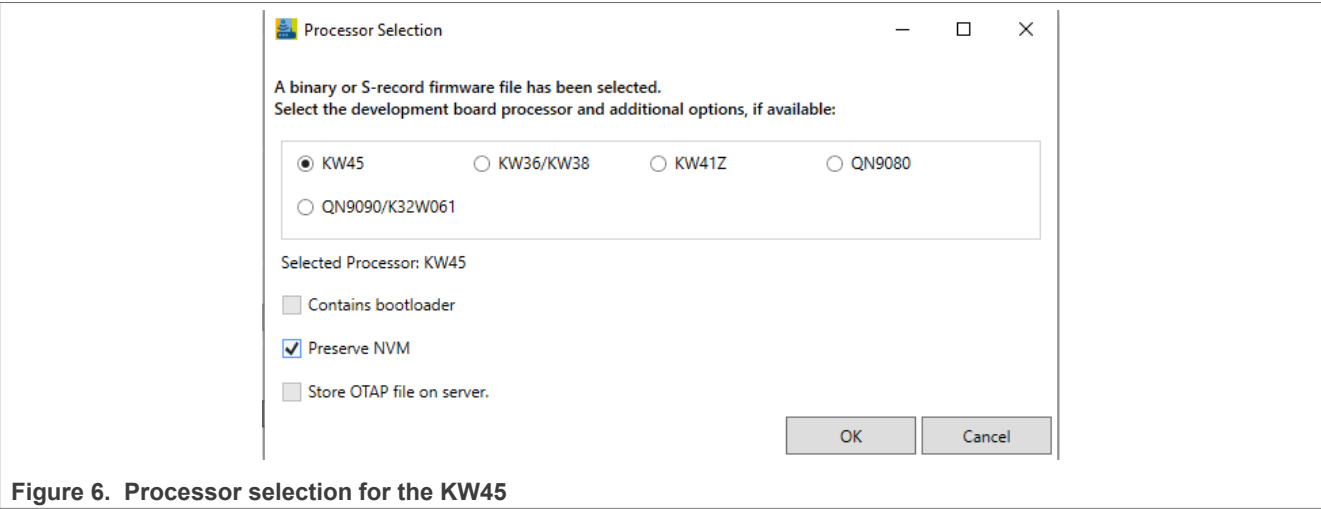


Figure 6. Processor selection for the KW45

4. You can now select the type of image you want to upgrade. The type can either be the application (**M33**) or the KW45 radio (**M3**), or both.

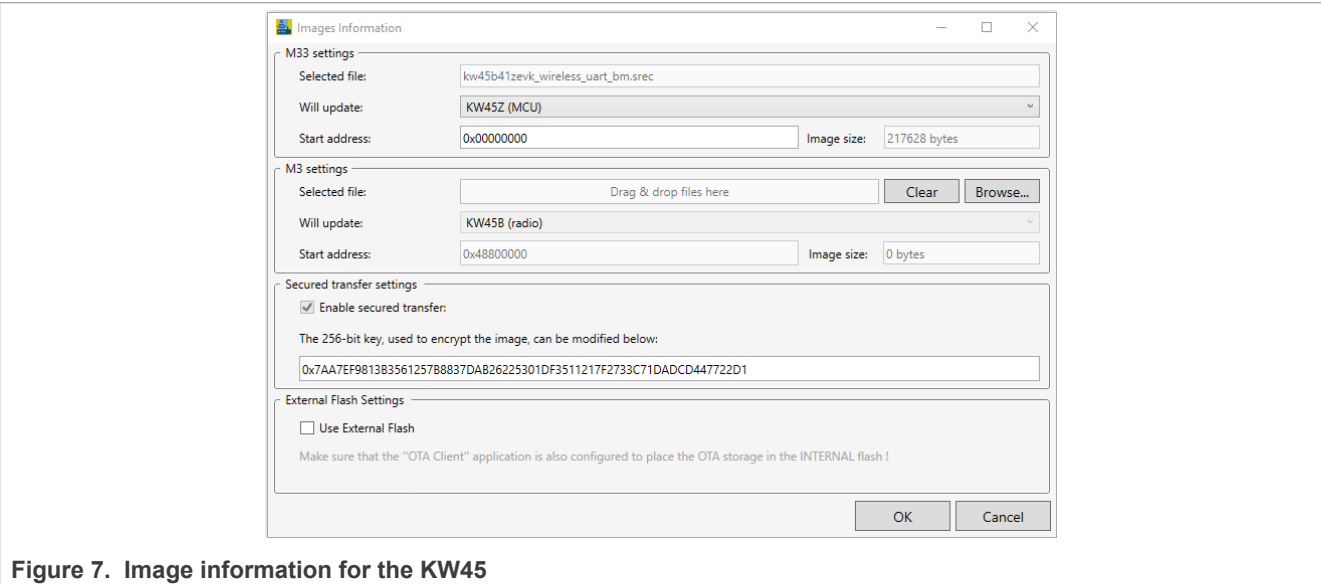


Figure 7. Image information for the KW45

5. Save this file in a known location.

6 Testing the OTAP software

To test the OTAP software, steps are as follows:

1. Open the **IoT Toolbox** app and select the **OTAP** demo.
2. To start scanning for a suitable advertiser, click **SCAN**.

Creating Firmware Update Image for KW45B41Z/K32W148 using Over the Air Programming Tool

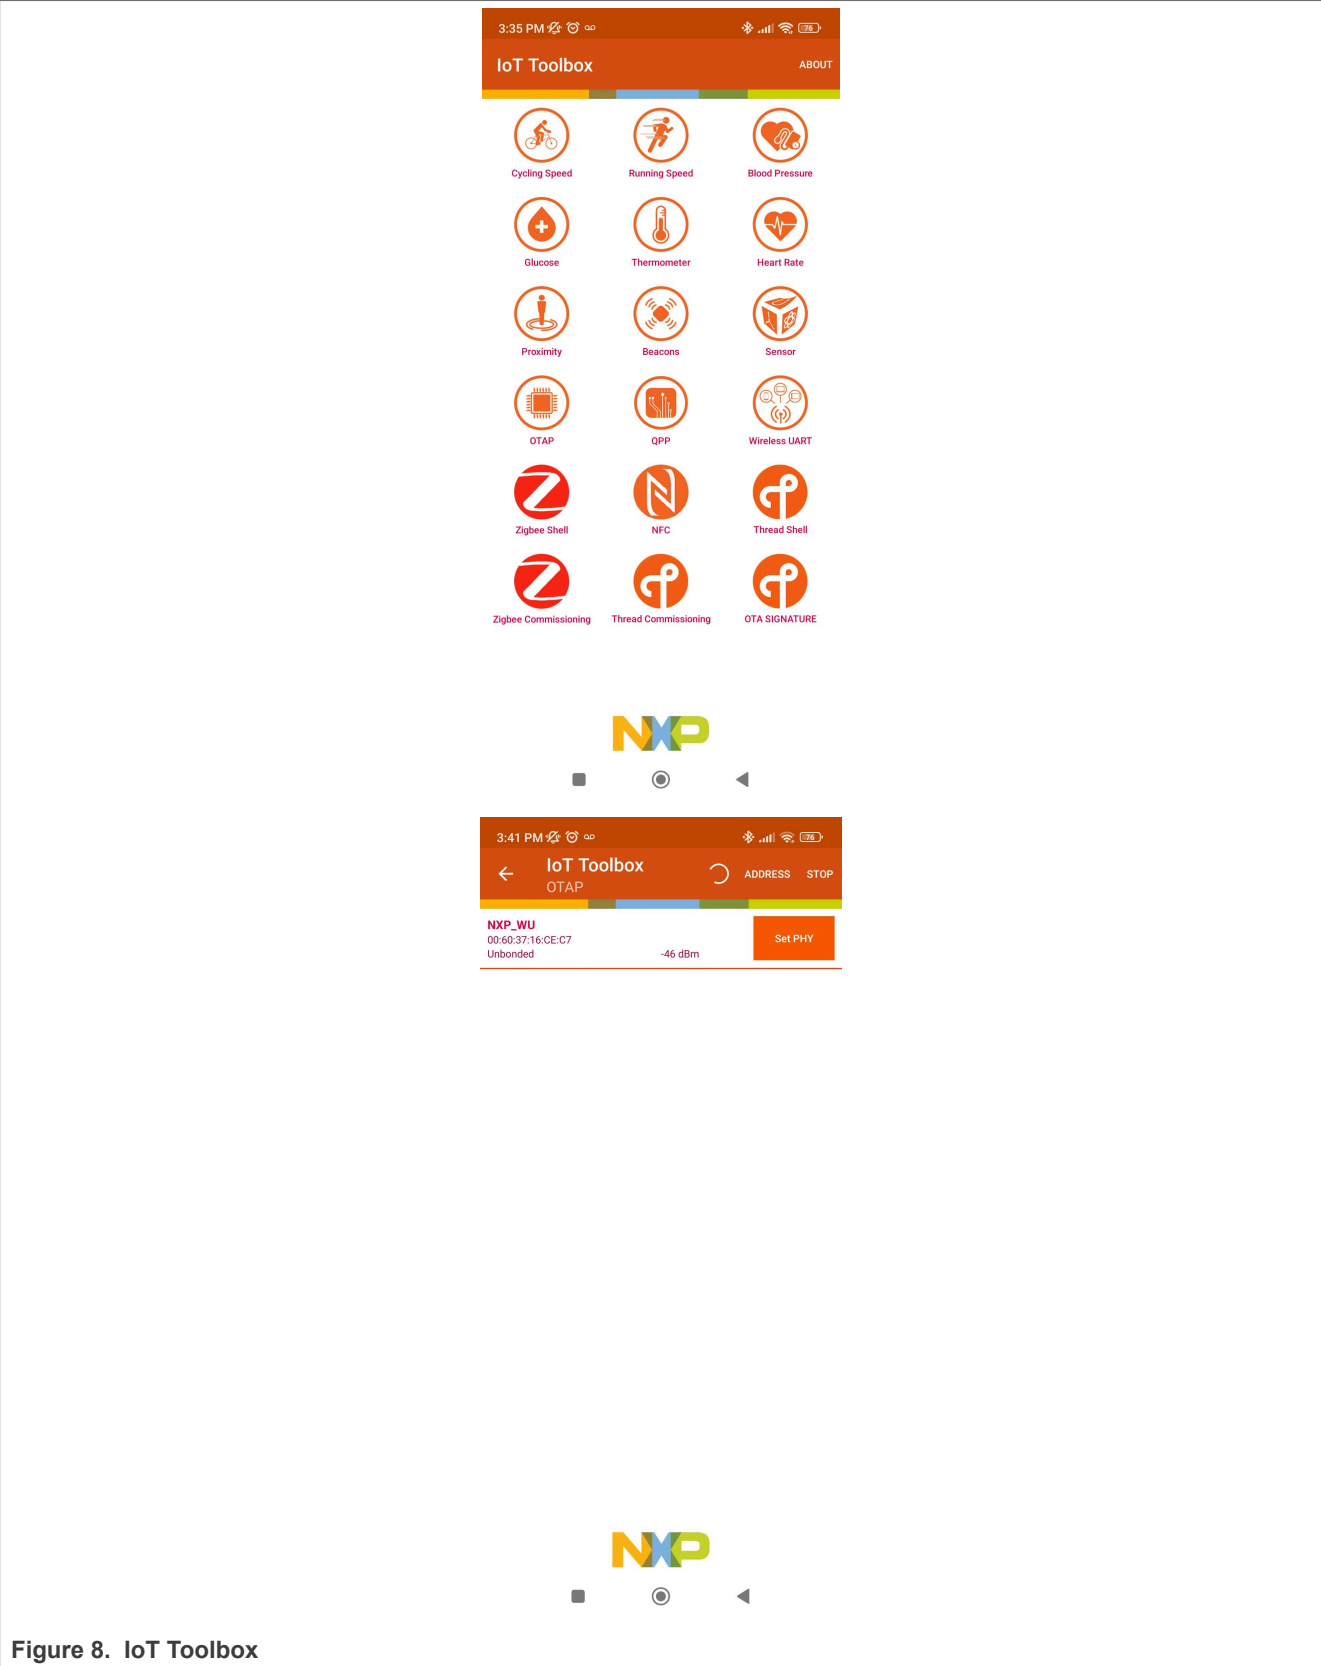


Figure 8. IoT Toolbox

3. Click **Open** button and search for the Wireless OTAP SREC file.

Creating Firmware Update Image for KW45B41Z/K32W148 using Over the Air Programming Tool

4. To start the transfer, click **Upload**. Wait until the confirmation message is displayed.



Figure 9. Uploaded image using IoT Toolbox

5. Wait a few seconds until the OTAP bootloader has finished programming the new image. The wireless UART application starts automatically, with the RGB LED blinking.

7 Revision history

The [Table 1](#) lists the substantive changes done to this document since the initial release.

Table 1. Revision history

Revision number	Date	Substantive changes
1	21 March 2023	<ul style="list-style-type: none">Updated the download link for the otap tool in Section 2Updated the title to "Creating Firmware Update Image for KW45B41Z/K32 W148 using Over the Air Programming Tool"
0	10 February 2023	Initial release

8 Legal information

8.1 Definitions

Draft — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

8.2 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification. Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <http://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Suitability for use in non-automotive qualified products — Unless this data sheet expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

Translations — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Security — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately. Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at PSIRT@nxp.com) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

8.3 Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

NXP — wordmark and logo are trademarks of NXP B.V.

AMBA, Arm, Arm7, Arm7TDMI, Arm9, Arm11, Artisan, big.LITTLE, Cordio, CoreLink, CoreSight, Cortex, DesignStart, DynamiQ, Jazelle, Keil, Mali, Mbed, Mbed Enabled, NEON, POP, RealView, SecurCore, Socrates, Thumb, TrustZone, ULINK, ULINK2, ULINK-ME, ULINK-PLUS, ULINKpro, µVision, Versatile — are trademarks and/or registered trademarks of Arm Limited (or its subsidiaries or affiliates) in the US and/or elsewhere. The related technology may be protected by any or all of patents, copyrights, designs and trade secrets. All rights reserved.

Creating Firmware Update Image for KW45B41Z/K32W148 using Over the Air Programming Tool

Bluetooth — the Bluetooth wordmark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by NXP Semiconductors is under license.

Contents

1	Introduction	2
2	Prerequisites	2
3	Software setup with IAR	2
3.1	OTAP image format file	3
4	Software setup with MCUXpresso	5
5	How to create an image with OTAP tool	6
6	Testing the OTAP software	7
7	Revision history	9
8	Legal information	10

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.
